


TECHNICAL RECOMMENDATIONS:

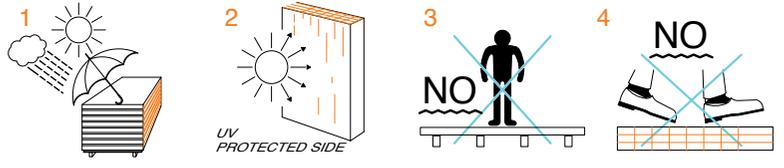


1. Protect the sheets from the sun and rain
2. Install the sheets always with the UV protected layer facing outwards
3. Multiwall polycarbonate sheets **can not be walked upon**
4. Do not walk onto the sheets at any time. Follow safety regulations and safe methods of installation

Polycarbonate may suffer a chemical attack from some products, therefore:




5. Use **only compatible clear silicone** for the sealing
6. Use only **water and mild detergents** for cleaning

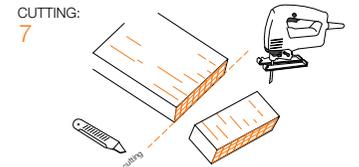

The sheets are supplied to the exact length required either **thermosealed or sealed with an aluminum foil tape** at the ends

7. Cutting of the sheets can be executed on site by the means of a hack sawing machine (1) or of a cutter (2). Seal the open cells after cutting

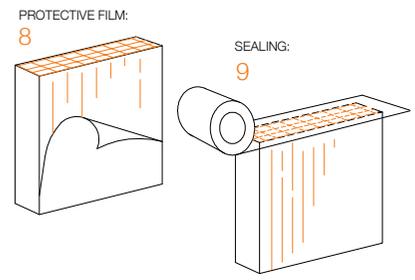


8. Take off the protective film before the installation.


9. Seal the open cells with an adhesive aluminium tape

10. Protect the sealing with an upper and lower profile

10a) Lower profiles must be drilled for water draining

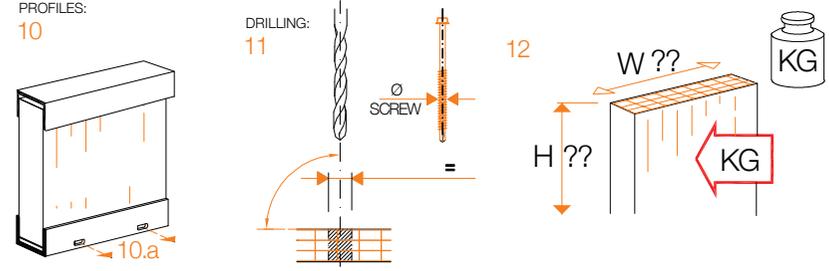

Side option A
Rafter centres - sheet width plus 20mm

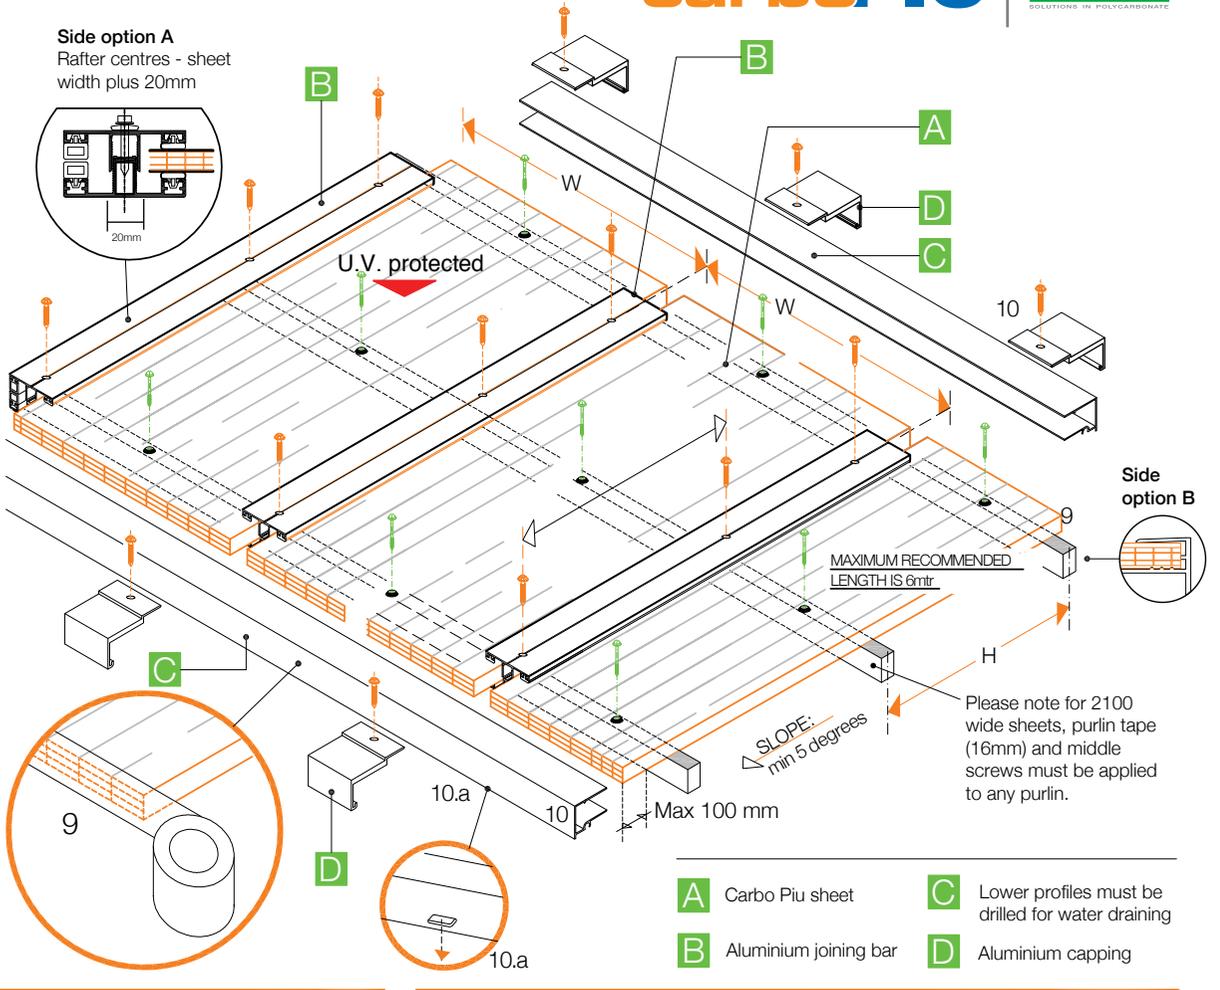

- A** Carbo Piu sheet
- B** Aluminium joining bar
- C** Lower profiles must be drilled for water draining
- D** Aluminium capping

11. Drilling of the sheets can be executed on site by means of a drill and suitable heads. The hole must be 3mm wider than screw gauge or a slot along the length

12. Loading and Spacings - Check our technical literature to determine loading and spacing of the whole system

